

## Fast Operating Guide (SA20C)

### Answer call (talk)

“☎” : 1st touch to talk, 2nd touch to stop.

### Monitor door and CCTV camera

“👁” : 1st touch for door 1, 2nd touch for door 2, 3rd touch for CCTV 1, 4th touch for CCTV 2, 5th touch for CCTV 3, 6th touch for CCTV 4, 7th touch to exit.

### Open the door

Touch “🔓” to unlock while the unit under talk mode.

### Intercom

Hold “📞” to see the relevant room number and you could choose the room number by touching “📞”, then touch “☎” to call.

### Call transfer

The operation is the same as “Intercom” under talk mode.

### Image & Video review

Touch “📺” (screen on) → “⚙️” (till there have the time and date display at upper right corner on screen) → “🖼️” to review mode and touch “⏪” / “⏩” to review the last / next one. If there have “🎬” icon at upper right corner on screen, you can touch “🖼️” to play the video.

### Talk volume

Under talk mode, touch “⏮” or “⏭” to adjust.

### Ring music set


Hold “⚙️” to enter into main menu to select MUSIC SET then choose the item which you want to set by touching “⏪” or “⏩”.



- Set the different ring music for door 1 and door 2.
- Set the ring time.
- Set the ring volume.

### System set

Hold “⚙️” to enter into main menu to select SYSTEM SET then choose the item which you want to set by touching “⏪” or “⏩”.

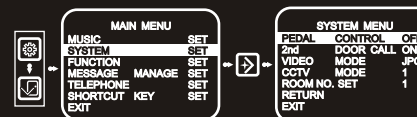

- Choose pedal control for talk or 2<sup>nd</sup> door calling function (for option).
- Set the video mode (JPG / AVI for option). **Remark: AVI mode is only available for W200 / PH200.**
- Set the CCTV mode (only available for the main unit).
  - Mode 1: All the indoor units could monitor their own connecting CCTV camera.
  - Mode 2: All the indoor units could monitor the CCTV camera which connected to the main indoor unit.
- Set the room number.

### Function set

Hold “⚙️” to enter into main menu to select FUNCTION SET then choose the item which you want to set by touching “⏪” or “⏩”.



- Turn on / off the AWAY function. **Remark: AWAY function is only available for the unit with image memory function.**
- Turn on / off the NO BOTHER (MUTE) function.
- Set the extension switch’s control time (AUX. SERVICE TIME).
- Set the unlock open time.

### Message manage (this function is only available for W200/PH200)

Hold “⚙️” to enter into main menu to select MESSAGE MANAGE then choose the item which you want to set by touching “⏪” or “⏩”.



- DIY MUSIC: record your preferred tone as ring music.
- Guest message: leave the message to the visitors.
  - Operation: Record the message → → turn on Guest message function → turn on AWAY function (Suggest: set the ring time to 5s).
- Home message: leave the message to your family members.
  - Operation: Record the message → turn on the Home message function(reminding) → Manually play the recorded message.
    - Remark: The above function could be set on the main unit only when the system has more than 1pc indoor unit.**

### Shortcut key set

Hold “” to enter into main menu to select SHORTCUT KEY SET then choose the item which you want to set by touching “” or “” as follow



The system default to:


“” :Away “” :Mute (No bother)

“” :memory review (available for the model with image memory function)

**Remark: The functions which you set with shortcut key, should hold the “”, “”, “”, “” till the unit sound “Di” to enter into, hold it again till the unit sound “Di Di” to exit.**

### Monitor channel set

Hold “” to enter into Monitor channel setup , turn “ON” the necessary monitor channel by touching “” or “” .

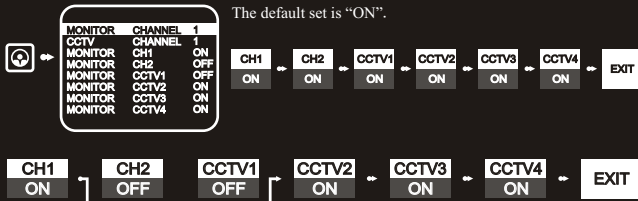

The default set is “ON”.

### Image review

Touch “” to enter into monitor status, then by touching “” & “” to check the taken photos and touching “” / “” to review the last / next one.


### Video review

Touch “” to enter into monitor status, then by touching “”, “” & “” to video review mode and touching “” to review the video, touching “” / “” to review the last / next one.

**Attention: Please wait for some seconds to the next step of operation.(touching)**

### Telephone set (when the system has more than 1pc indoor unit, the function is only available on the main unit)

Hold “” to enter into main menu to select TELEPHONE SET then choose the item which you want to set by touching “” or “” .

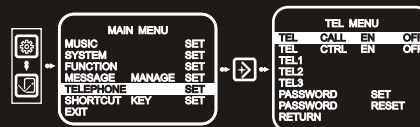

a. Transfer the call from outdoor unit to your phone: TEL 1, TEL 2, TEL 3, OFF

Choose the phone which you want to connected from the listed (TEL 1, TEL 2, TEL 3) or if this function is unnecessary, you can choose OFF to turn off this function.

b. Transfer the telephone call to the indoor unit while no one to answer the telephone after 7 times ringing: ANY, LIST, OFF.

ANY: need to input the administration password to control the indoor unit.

LIST (TEL 1, TEL 2, TEL 3): no need to input the administration password to control the indoor unit.

OFF: to turn off this function.

c. Telephone number setup:

Input the phone number that you wish connected when you are not at home

(TEL 1, TEL 2, TEL 3 means you could input three different telephone number that you wish)

#### Phone number input method

By touching “” or “” to choose the number and touch “” to confirm the chose number, when all the number have been chose and correct, to choose “” & “” to confirm.

#### Phone number deleted method

By touching “” or “” & “” to delete.

d: Password setup:

Administration password: input 4 digits, the input method like the phone number input

Unlock password: input 3 digits, the input method like the phone number input.

### Password and control code for telephone's calling

When the telephone calls in, after hearing the “Du”, then you could input the password to control the indoor unit.

Administration password “\*#----#”,

Unlock password “\*----#”,

*08#	listening to door 1
*09#	listening to door 2
*07#	talk to door 1
*20#	talk to door 2
*10#	setup the home message
*12#	listening the home message
*13#	turn on home message
*14#	exit the home message
*15#	turn on no bother mode
*16#	exit the no bother mode
*17#	turn on AWAY mode
*18#	exit the AWAY mode
*86#	hang up

### Turn off the telephone function

Enter into the TELEPHONE SET, setup TEL CALL EN and TEL CTRL EN to OFF mode.

Then the telephone function as well as the telephone LED is turned off.

### Alarm

“Di” at intervals: the unit has the same room number with another unit.

“Di Di” at intervals: communication problem between the unit and main unit. Check the circuit.